



Bushes

Bush dimensions legend

SHOCK ABSORBER BUSHES

EB1 eye ring: Tapered eye full bush type
EB2 eye ring: Tapered eye half bush type
EB2 eye ring: Tapered eye full bush type
EB3 eye ring: Tapered eye half bush type
EB3 eye ring: Tapered eye full bush type
Parallel eye ring type bushes
Round (flat) pin type bushes

SPECIAL APPLICATION BUSHES

Trailer bushes
Australian Autobus bus
Austral/Denning bus
Bedford bus
BPW trailer
Ford
Freightliner
Hendrickson

International
Kenworth
Krugger
Mack
Mercedes bus
M.C.A. bus
Neway
Peterbilt
Ringfeder
ROR trailer
Scania
Superior Sleeper Cabs
Truck Art
Western Star
York



POWERDOWN SHOCK ABSORBER BUSHES ***tuffyellow***

Developed from high-quality urethane elastomers

Capacity to bear high loads in tension & compression

Greater durability and longer life than other bushes

High resistance level to oils, greases & solvents

Performs in temperatures from -40°C to +100°C

CAD configured to fine tolerances for better fitment


Rigorously R & D tested in the harshest conditions



BUSH DIMENSIONS LEGEND


TAPERED EYE - HALF BUSH TYPES: HEB Series

BUSH MEASUREMENTS

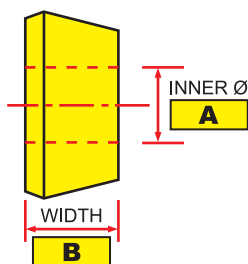


Note: Refer to table columns: A, B, C

CROSS SECTION OF SHOCK ABSORBER EYERING SIZE

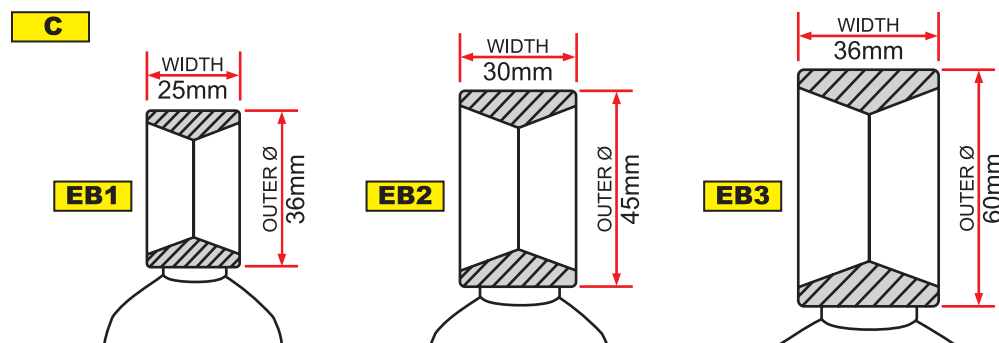


TAPERED EYE - FULL BUSH TYPES: EB Series

BUSH MEASUREMENTS

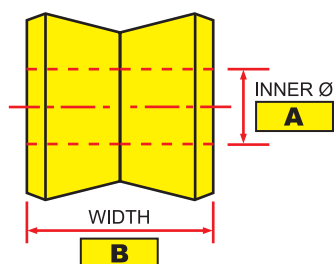

Note: Refer to table columns: A, B, C


CROSS SECTION OF SHOCK ABSORBER EYERING SIZE

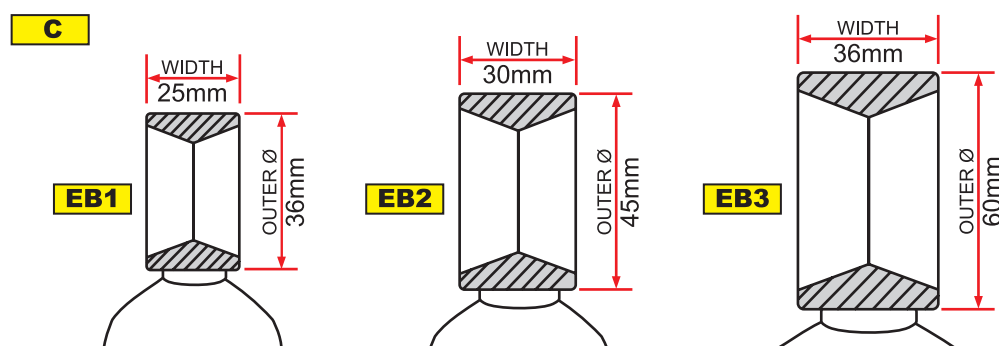

ROUND (FLAT) PIN TYPE BUSH

BUSH MEASUREMENTS


Note: Refer to table columns: A, B, C, D

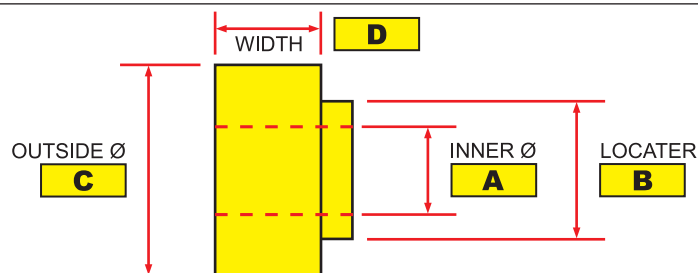

PARALLEL EYERING TYPE BUSH

BUSH MEASUREMENTS

Note: Refer to table columns: A, B, C, D

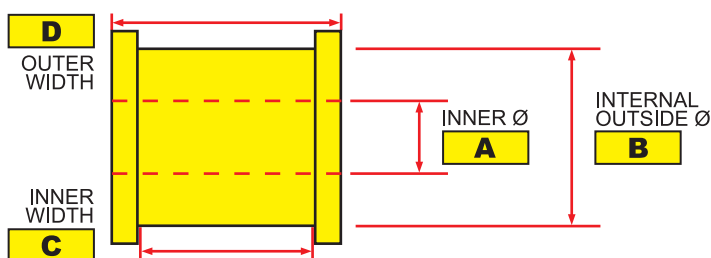







Bushes

SHOCK ABSORBER BUSHES

EB1 EYE RING TAPERED EYE BUSHES - FULL BUSH TYPE (Ranked by ID: Measure A)

PART NO.	PICTURE	DESCRIPTION	A	B	C
EB116		Fits EB1 eyering to 16mm ID	16mm	31mm	EB1
EB119		Fits EB1 eyering to 19mm ID	19mm	31mm	EB1

EB2 EYE RING TAPERED EYE BUSHES - HALF BUSH TYPE (Ranked by ID: Measure A)

PART NO.	PICTURE	DESCRIPTION	A	B	C
HEB216		Fits EB2 eyering to 16mm ID	16mm	20mm	EB2
HEB219		Fits EB2 eyering to 19mm ID	19mm	20mm	EB2
RHEB219 Rubber Version					

EB2 EYE RING TAPERED EYE BUSHES - FULL BUSH TYPE (Ranked by ID: Measure A)






PART NO.	PICTURE	DESCRIPTION	A	B	C
EB216		Fits EB2 eyering to 16mm ID	16mm	39mm	EB2
PDB501		Adapts EB2 eyering to sleeved eye of 16mm x 37mm Suits Toyota Hilux Lower Mount on part no.'s NM325 & G6011Y	18mm	35mm	EB2
EB219		Fits EB2 eyering to 19mm ID	19mm	39mm	EB2
REB219		Rubber Bush	19mm	38mm	EB2
EB220-43		Allows adaption EB2 to 45mm Neway & Hendrickson	20mm	43mm	EB2
PDB179		Fits EB2 eyering to 22mm ID	22mm	43mm	EB2
PDB425		Fits EB2 eyering Lower bush for Hino Dutro shocks T448 & T63451M1	22mm	38mm	EB2
PDB462			22.2mm	83mm	EB2










Bushes

SHOCK ABSORBER BUSHES

EB3 TAPERED EYE BUSHES - HALF BUSH TYPE (Ranked by ID: Measure A)

PART NO.	PICTURE	DESCRIPTION	A	B	C
HEB319		Fits EB3 eyering to 19mm ID	19mm	24mm	EB3
HEB322		Fits EB3 eyering to 22mm ID	22mm	26mm	EB3
HEBC322		Fits Lower eyering on shock absorber P033 for Scania front steer applications	22mm	23mm	EB3
HEB325		Fits EB3 eyering to Standard US 1" (25mm) ID bush	25mm	24mm	EB3
RHEB325 Rubber Version					
PDB683		Fits EB3 eyering to 32mm ID bush	32mm	23.5mm	EB3

EB3 TAPERED EYE BUSHES - FULL BUSH TYPE (Ranked by ID: Measure A)

PART NO.	PICTURE	DESCRIPTION	A	B	C
EB316		Fits EB3 eyering to 16mm ID	16mm	53mm	EB3
EB319		Fits EB3 eyering to 19mm ID	19mm	53mm	EB3
EB319-48		Fits EB3 eyering to 19mm ID trailer applications restricted space	19mm	48mm	EB3
REB319-45ST		Fits EB3 eyering Bonded Rubber Bush & steel Sleeve Rubber alternative to suit P42013, P42372, P43313 & ZP42001	19mm	45mm	EB3
REB319-50ST		Fits EB3 eyering to 19mm Bonded Rubber Bush & steel Sleeve	19mm	50mm	EB3
REB320-50ST		Fits EB3 eyering to 20mm Bonded Rubber Bush & steel Sleeve	20mm	50mm	EB3
EB322		Fits EB3 eyering to 22mm ID	22mm	53mm	EB3



Bushes

SHOCK ABSORBER BUSHES

EB3 TAPERED EYE BUSHES - FULL BUSH TYPE cont. (Ranked by ID: Measure A)

PART NO.	PICTURE	DESCRIPTION	A	B	C
EB322-45		Fits EB3 eyering to 22mm ID restricted space	22mm	45mm	EB3
EB322-48		Fits EB3 eyering to 22mm Fitted to P42001 with CT50-22 sleeve for 16mm ID x 50mm long	22mm	48mm	EB3
PDB615		Poly Bush - Fits EB3 eyering to 22mm	22mm	82mm	EB3
EB323-44		Fits EB3 eyering to 23mm Fitted to P42013, P43313 with 405703 sleeve for 19mm ID x 45mm long. For use on Hendrickson & Neway rear drive susp.	23mm	44mm	EB3
REB325-44		Rubber Bush - Fits EB3 eyering to 25mm	25mm	44mm	EB3
REB325-50		Rubber Bush - Fits EB3 eyering to 25mm	25mm	50mm	EB3
EB325		Fits EB3 eyering to Standard US 1" (25mm) ID	25mm	53mm	EB3
EB325-48		Fits EB3 eyering to Standard US 1" (25mm) ID	25mm	48mm	EB3
PDB390		Poly Bush - Fits EB3 eyering to 28mm	28mm	57mm	EB3
PDB533		Poly Bush - Fits EB3 eyering to 28mm	28mm	81.5mm	EB3
PDB534		Poly Bush - Fits EB3 eyering to 28mm	28mm	96.5mm	EB3
PDB682		Universal 30mm ID x 50mm Long 1 piece bush	30mm	50mm	EB3



Bushes

SHOCK ABSORBER BUSHES

PARALLEL EYERING TYPE BUSHES (Ranked by ID: Measure A)





PART NO.	PICTURE	DESCRIPTION	A	B	C	D
CR13		Multi purpose bush to suit parallel eyerings	13mm	27mm	24mm	32mm
CR16		Multi purpose bush to suit parallel eyerings	16mm	27mm	24mm	38mm
RCR132L		Bonded Rubber Bush & sleeve. Suits lower eyering: P099, P132, P405. Upper/Lower eyering: P126 (for polyurethane alternative refer CR132LK)	19mm	27mm	24mm	47mm
RCR132U		Bonded rubber bush & sleeve Suits upper eyering: P099, XP132 P132, ZP132.C2 (for polyurethane replacement kit refer CR132UK1)	19mm	34mm	30mm	45mm
L10		Replaces bush & steel tube on Gabriel Parallel eyerings for Hendrickson applications Note: Do not over tighten	19mm	35mm	31mm	41mm
L10-2		Replaces bush & steel tube on Monroe Parallel eyerings for Neway applications Note: Do not over tighten	19mm	39mm	35mm	45mm
CR20		Multi purpose bush to suit parallel eyerings	20mm	27mm	24mm	47mm
PDB224		To suit OE shocks York - 61.610052 Sachs - 47 1700 131 057 Use with CT50.22 sleeve for 16mm x 50mm mount size	20mm	40mm	32mm	39.5mm
CR132U		Bush to suit parallel eyerings for use in special applications	22mm	34mm	30mm	45mm
CR132L		Bush to suit parallel eyerings for use in special applications	22mm	38mm	32.5mm	45mm
CR132U24		Bush to suit parallel eyerings for use in special applications	24mm	34mm	30mm	45mm
CR197		Bush to suit parallel eyerings for use in special applications	25.4mm	36mm	33.5mm	43mm








Bushes

SHOCK ABSORBER BUSHES

PARALLEL EYERING TYPE BUSHES cont. (Ranked by ID: Measure A)

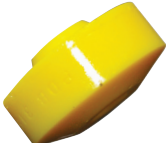PART NO.	PICTURE	DESCRIPTION	A	B	C	D
PDB246		Bush to suit parallel eyerings for use in special applications	28mm	53.3mm	33.7mm	53mm
PD067		Bush to suit parallel eyerings for use in special applications	29mm	39mm	40mm	55mm
CR30		Multi purpose bush to suit large parallel eyerings Replacement bush for P831M2	30mm	53mm	50mm	64mm
CR32		Multi purpose bush to suit large parallel eyerings Replacement bush for XT45079 & P831M1	32mm	53mm	50mm	64mm

ROUND (FLAT) PIN TYPE BUSHES (Ranked by ID: Measure A)

PART NO.	PICTURE	DESCRIPTION	A	B	C	D
PDB319C2 Yellow Poly Compound		Yellow Polyurethane Multi-fit mounting pin bush 10mm-11mm pin with tapered locator	10mm	15mm - 20mm	38mm	19mm
PDB319C6 Black Poly Compound		Black Polyurethane Multi-fit mounting pin bush 10mm-11mm pin with tapered locator	10mm	15mm - 20mm	38mm	19mm
PD204		Bush with locator to suit 10-11mm mounting Pin/stud	11mm	15mm	38mm	20mm
PDB289-12		Bush with tapered locator to suit 14mm Mounting Pin/stud	12mm	16-23mm	40mm	17mm
PDB289-14		Bush with tapered locator to suit 14mm Mounting Pin/stud	14mm	16-23mm	40mm	17mm



Bushes

SHOCK ABSORBER BUSHES

ROUND (FLAT) PIN TYPE BUSHES cont. (Ranked by ID: Measure A)












PART NO.	PICTURE	DESCRIPTION	A	B	C	D
PD240		Bush without locator to suit 14mm mounting Pin/stud used on RT269 & general applications	14mm	N/A	37mm	17mm
PDB289		Bush with tapered locator to suit 14mm Mounting Pin/stud	14mm	16-23mm	40mm	22mm
PDB243		Bush with tapered locator to suit 14mm Mounting Pin/stud	14mm	22-30mm	50mm	21mm
PDB009		Polyurethane Bush with tapered locator to suit 16mm Mounting Pin/stud (for rubber version see PDB807)	16mm	22-31mm	58mm	25mm
PDB807		Black rubber bush with tapered locator to suit 16mm Mounting Pin/stud (for polyurethane version see PDB009)	16mm	22-31mm	58mm	25mm
PDB313-18		Bush with tapered locator to suit Mount Pins on Kenworth Shocks P705, P793, P1041 (Use with internal sleeve)	19mm	22-31mm	58mm	18mm
PDB313		Bush with tapered locator to suit Lower Mount Pin on Volvo Shocks P758 & P769 (Use with internal sleeve)	19mm	22-31mm	58mm	25mm
UD103		Bush with tapered locator suits: P42310.Z, P502, CC101 use original locating sleeve	19mm	23-30mm	67mm	29mm
PDF-001		Lower half of set PDF-001/PDF-002 Suits older version Austral Denning shocks: 769 002, CC112, P42769	21mm	32mm	64mm	32mm
PDF-002		Upper half of set PDF-001/PDF-002 Suits older version Austral Denning shocks: 769 002, CC112, P42769	21mm	N/A	64mm	26mm



Bushes

SPECIAL APPLICATION BUSHES

TRAILER BUSHES


PART NO.	PICTURE	MAKE/MODEL	DESCRIPTION
1101 Yellow		Suits suspensions: Fruehauf - UXA0004 Freighter - 203-02448 McGrath - N2613 Mackay - T101 Rubrey Owen M series - 6422	Rocker Box Bush OD=89-68mm ID=51mm W=112mm
1101 RED Red Heavy Duty			
PD1101HD Orange Extra Heavy Duty for side tipper applications			
1101-HB		2 piece bush for ease of fitment to suit above applications	Rocker Box Bush - 2 piece OD=89-68mm ID=51mm W=112mm
1301 Yellow		Suits suspensions: Fruehauf P2, F2: UXA000011 & ULA 6259 Freighter TAA49: 161-07043 McGrath: 13B00133, N2603 & N2469 Colrain Roadking: SP1301 York: 504823 Rubrey Owen: 311-147 Mackay: T301	Track Rod Bush OD=55-44mm ID=32mm W=60mm
1301 RED Red - Heavy Duty			
PD1301HD Orange Extra Heavy Duty for side tipper applications			
1308 Yellow		Suits suspensions: Freighter International Harvester: 347374C1 Dayton: 39400016 Rubrey Owen 'M' Series: 6425 & 21011745 Reyco: 09729-01 Colrain Roadmaster: SP1308 Mackay: T308 BPW - Transpro Dana- Webb, Blair	Track Rod Bush OD=47.5mm ID=24mm W=72mm
1308 RED Red Heavy Duty			
PD1308ST		Bonded bush & sleeve to suit above suspension	Track Rod Bush OD=47mm ID=22.3mm W=75mm
PDBP-600		Suits: BPW trailer suspension OE: 02.0316.06.00	Front Spring Pivot Bush OD=60mm ID=30mm W=102mm





Bushes

SPECIAL APPLICATION BUSHES



AUSTRALIAN AUTOBUS BUS

PART NO.	PICTURE	MAKE/MODEL	DESCRIPTION
PDRIM		Radiator Isolator Mount	OD=76mm ID=36mm 39mm thick




AUSTRAL/DENNING BUS

PART NO.	PICTURE	MAKE/MODEL	DESCRIPTION
MKM-1		Tourmaster V6 OE: 142350	Engine Mount OD=81mm ID=20.5mm 38mm thick
PDRR-402		Austral/Denning OE: 1311922	Radius Rod - Locating Bush OD=132mm ID=80mm W=46mm

BEDFORD BUS

PART NO.	PICTURE	MAKE/MODEL	DESCRIPTION
SPF430		VAM	Rear Spring Eye Bush OD=35mm ID=19mm
SPF574		VAM	Rear Spring Shackle Bush OD=62mm ID=22

BPW TRAILER

PART NO.	PICTURE	MAKE/MODEL	DESCRIPTION
PDBP-600		OE: 02.0316.06.00	Front Spring Pivot Bush OD=60mm ID=30mm W=102mm
PD067K1		Bush, Sleeve & Grease Kit to suit: P42550, P53024 24mm ID x 55mm long WITH LARGE COTTON REEL EYE RING on BPW Trailer applications	Cotton Reel eye bush OD=39mm ID=24mm W=55 (1 kit required per eyering)
PD246K		Replacement bush & sleeve kit on P150 & P183 with WITH LARGE COTTON REEL EYE RING to suit early BPW Trailer applications. 24mm ID x 55mm long	Cotton Reel eye bush OD=53mm ID=24mm W=55 (1 kit required per eyering)






Bushes

SPECIAL APPLICATION BUSHES

FORD

PART NO.	PICTURE	MAKE/MODEL	DESCRIPTION
PDBH		Suits Louisville bonnet hinges: LTS - (RHS) F1HZ16796BA (LHS) E8HZ16797B LTL - (RHS) E3HZ16796A (LHS) E3HZ16797A	onnet Hinge Pivot Bearing OD=19mm ID=13mm W=89mm Fits Ford Hinge (part saves total hinge replacement)
PDFD3H Poly Compound		Ford Louisville OE: D3HZ5281A	Exhaust Mount Bush OD=30mm ID=11.5mm W=18mm
PDFLRB		Ford Louisville OE: F6HZ8A293A (LH) F6HZ8A290AB (RH)	Radiator Bracket Bush OD=34mm ID=13mm W=32mm
PDLCM		Ford Louisville OE: F5HZ 5000130A	Front Cab Isolation Mount
PDLE-2		Ford Louisville OE: DOHZ-6068B Early Model Cummins Engine Mount	PDLE-2 Important Note: Where the Rear Engine support pin is mounted on the Engine , the RED half of the mount bush is placed on the Bottom Where the Rear Engine support pin is mounted on the Chassis , the RED half of the mount bush is placed on the Top

FREIGHTLINER





PART NO.	PICTURE	MAKE/MODEL	DESCRIPTION
PDB390K		To suit Freightliner P319 Rear Drive FAS I Air Susp. Lower Mount	Rear Shock Bush - Lower OD=47mm ID=19.5mm W=57mm (1 kit required per eyering)
PDB533K		To suit Freightliner P101 & P794 Rear FAS II Air Susp. Lower Mount	Rear Shock Bush - Lower OD=47mm ID=19.5mm W=81.5mm (1 kit required per eyering)
PDB534K		To suit Freightliner P101 & P794 Rear FAS II Air Susp. Upper Mount	Rear Shock Bush - Lower OD=47mm ID=19.5mm W=81.5mm (1 kit required per eyering)








Bushes

SPECIAL APPLICATION BUSHES

HENDRICKSON

PART NO.	PICTURE	MAKE/MODEL	DESCRIPTION
CR197K		Bush & sleeve kit to suit parallel eyering on P161, P162, P178 for Hendrickson Trailer applications - NOTE - will only replace above part numbers fitted with poly bushes.	Shock Bush & Sleeve kit (1 kit per eyering) ID=19.5mm W=45mm
L10		Gabriel Parallel Eyering	Shock Bush suit Eyering ID 35mm (replaces original bush & sleeve) ID=35mm W=41mm NOTE: Do not over tighten
L10-2		Monroe Parallel Eyering	Shock Bush suit Eyering ID 35mm (replaces original bush & sleeve) ID=35mm W=45mm NOTE: Do not over tighten
PDB179K		Replacement bush & sleeve to suit: Gabriel std. EB2 / ES36 fitting & Hendrickson A13123L-4P, A13123L-8P & 98941-006-8P 19mm ID x 45mm long	Shock Bush & Sleeve kit (1 kit per eyering) ID=19.5mm W=45mm

INTERNATIONAL

PART NO.	PICTURE	MAKE/MODEL	DESCRIPTION
ICM337		ACCO A, B, C, D, E OE: 3016324R3	Cab Insulator Bush MTG-2 OD=50mm ID=31mm W=19mm
PDB317		ACCO A & E Series OE: 3016793R1	Cab Mount Bush
PDFS-2S		S & T Lines OE: 470031C2	Rear Engine & Gearbox Mount
PD869C		ACCO D, E S Line, Transtar OE: 476869C1	Front Engine Mount OD=76mm ID=16mm W=56.5mm
SP148-16		TRANSTAR 4700 OE: 3265548R1	Surge Tank Support Bush OD=30-24mm ID=16mm W=18mm




Bushes

SPECIAL APPLICATION BUSHES

KENWORTH

PART NO.	PICTURE	MAKE/MODEL	DESCRIPTION
KEM-247		60 series GM / Cummins OE: KA66-247 & K066C-247	Engine Mount
PD402		Airglide 100 susp. OE: K066-402	Sway Bar Bush
PDB313-18		Mounting pin bush to suit Powerdown shocks P660, P793 & P1041. Use with internal sleeve	OD=58mm ID=19mm 18mm thick with tapered locator of 22-31mm
PDB462K		Tapered eye bush & sleeve to suit Kenworth OE K374-44 upper mount (EB2 eye ring) Airglide 200 susp.	OD=39mm ID=16mm W=83 (1 kit required per eyering)
PDB602K		Kenworth Link Cab Mate susp.KWB689C OE: 1500-0860 Rod Bush	Cab Stabiliser Bar Bush kit (Kit re bushes both ends - contains 2 x poly bushes and 2 x crush tubes)
PDB615K		Tapered eye bush & sleeve to suit Powerdown P393 & P637 upper mount (EB3 eye ring) Airglide 200 susp. Will not suit Kenworth OEM shock absorbers	OD=48.5mm ID=16mm W=83 (1 kit required per eyering)
PDKCM-1		T650 OE:K066-176	Cab Mount

KRURGER



PART NO.	PICTURE	MAKE/MODEL	DESCRIPTION
PD2227K		Bush, Sleeve & Grease Kit to suit: Koni 90-2227	ID=20mm OAL=62mm (1 kit required per eyering)



Bushes

SPECIAL APPLICATION BUSHES

MACK

PART NO.	PICTURE	MAKE/MODEL	DESCRIPTION
MKM-1		Most applications OE: X50QL264	Rear Engine / Gear Box Mount OD=81mm ID=20.5mm 38mm thick
SN4396		All vehicles fitted with shock OE: 14QK29402M 14QK29403M 14QK29404M	Shock Bush Kit for 1 eyering (2 kits required per shock) Suits: CC107, CC110, P42372, P43313, P42013, ZP42001

MERCEDES BUS

PART NO.	PICTURE	MAKE/MODEL	DESCRIPTION
RB404		303, 305, 405 OE: 317 33 11 64	Radius Rod Bush Rubber Version
SPF846 (Poly Compound)		MERCEDES BUS 811, 811D, 912 MERCEDES TRUCK L609, L709, L811, L811.0, L912	Sway Bar link bush with internal sleeve

M.C.A. BUS



PART NO.	PICTURE	MAKE/MODEL	DESCRIPTION
PDRR-402		All regular coaches OE: 15-10-0006	Radius Rod Bush
RB404		Marathon Model OE: 317 33 11 64	Radius Rod Bush Rubber Version





Bushes

SPECIAL APPLICATION BUSHES

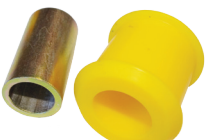NEWAY

PART NO.	PICTURE	MAKE/MODEL	DESCRIPTION
CR132LK1		Complete Bush & sleeve kit Suits lower eyering: P099, P132, P405. Upper/Lower eyering P126 (for rubber alternative refer RCR132L)	Shock Bush & Sleeve kit (1 kit per eyering) ID=19.5mm W=45mm
CR132UK1		Complete bush & sleeve kit Suits upper eyering: P099, XP132 P132, ZP132.C2 Use with 19mm ID sleeve (for rubber replacement kit refer RCR132U)	Shock Bush & Sleeve kit (1 kit per eyering) ID=19.5mm W=45mm


RINGFEDER

PART NO.	PICTURE	MAKE/MODEL	DESCRIPTION
PDRF-A		86G / 140 OE: 7998295	Ringfeder Bush (40mm Coupling) OD=110mm ID=51 27mm thick
PDRF-B		81G/5 OE: 7998325	Ringfeder Bush (50mm Coupling) OD=109.5mm ID=59 26mm thick

ROR TRAILER

PART NO.	PICTURE	MAKE/MODEL	DESCRIPTION
PD067K2		Bush, Sleeve & Grease Kit to suit: P53024M1 24mm ID x 58mm long WITH COTTON REEL EYE RING on R.O.R Trailer applications	Cotton Reel eye bush OD=39mm ID=24mm W=58 (1 kit required per eyering)
PD2227K		Bush, Sleeve & Grease Kit to suit: Koni 90-2227	ID=20mm OAL=62mm (1 kit required per eyering)

SCANIA


PART NO.	PICTURE	MAKE/MODEL	DESCRIPTION
PD604		Scania Bus: K82, K92, K112 OE: 213604	Sway Bar bush 'small' front




Bushes

SPECIAL APPLICATION BUSHES






SUPERIOR SLEEPER CABS

PART NO.	PICTURE	MAKE/MODEL	DESCRIPTION
PDSSM		Superior sleeper cab	Sleeper Box Mount OD=28mm ID=10.3 10.5mm thick

TRUCK ART

PART NO.	PICTURE	MAKE/MODEL	DESCRIPTION
CPB		Truck Art sleeper cab	Sleeper Cab Pivot Bush OD=47mm ID=19.4 39mm thick

WESTERN STAR







PART NO.	PICTURE	MAKE/MODEL	DESCRIPTION
PD869C		OE: 66001-3402	Cab mount
PD870		OE: 12005-3403	Engine mount
PD950		All models 1991 on OE: 04.9027950	Bonnet Locator
PD3401		OE: 12004-3401	Rear Engine Mount - Lower
PD3402		OE: 12004-3402	Rear Engine Mount - Upper




Bushes

SPECIAL APPLICATION BUSHES

WESTERN STAR cont.

PART NO.	PICTURE	MAKE/MODEL	DESCRIPTION
PD3405		OE: 63390-3405	Rear sleeper cab mount
PD3407		OE: 63390-3407	Sleeper box mount
PD3409		OE: 63390-3409	Front sleeper cab mount
PD6353		OE: 636353	Exhaust mount
PD9990		OE: 04900-9990	Radiator Mount
PDLE-2		OEM - 12004-4004 Early Model Cummins 2 piece kit consists: - 1 RED bush - 1 YELLOW bush	Important Note: Where the Rear Engine support pin is mounted on the Engine , the RED half of the mount bush is placed on the Bottom . Where the Rear Engine support pin is mounted on the Chassis , the RED half of the mount bush is placed on the Top .

YORK

PART NO.	PICTURE	MAKE/MODEL	DESCRIPTION
PDB171K		To suit Powerdown Shock P171 Upper and Lower Mounts on York Tecair FB	Tapered I Type Eyering comes with Bush and both 16mm and 20mm ID sleeves (1 Kit per eye ring)